67375-001
Rev 01

ENGLISH

aura

BLUETOOTH KEYPAD SMART LOCK

Installation and User Guide

Required tools

Ruler — Phillips head screwdriver

Additional Tools (depending on application)

Hammer — Wood block — Chisel

Kwikset
1-866-863-6584
www.kwikset.com

Parts List


Mounting Plate

Adapter Ring


Batteries

Keys

Exterior Assembly

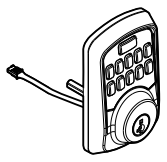

Interior Assembly

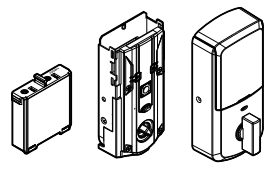

Latch A



Latch B



"B" is not included.
If needed, please contact Kwikset to order a drive-in latch for your lock.

For Latch / Strike


Strike



03809



46780




For Lock

SmartKey Tool



48654



49191


64109

68611


1 Prepare the door and check dimensions

If drilling a new door, use the supplied template and the complete door drilling instructions available at kwikset.com/doorprep


A Make sure your door is compatible. If you have a standard deadbolt mounted separately from the handle below it, your door is compatible.

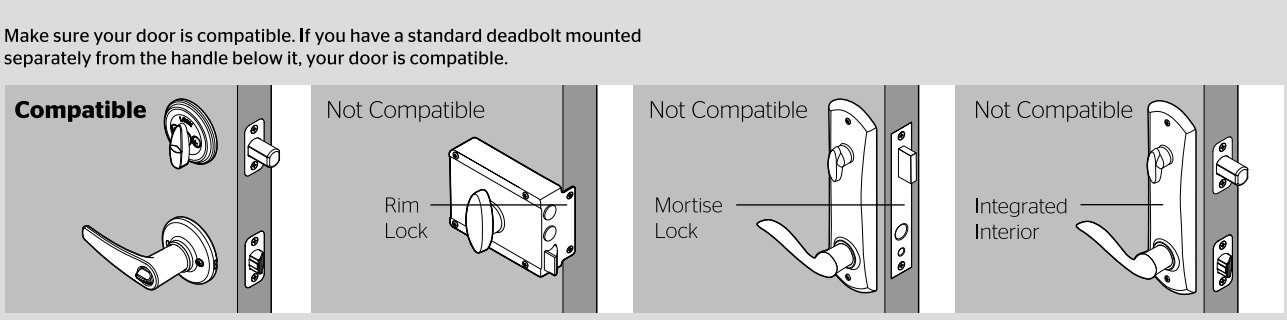

B Remove your existing deadbolt from your door.

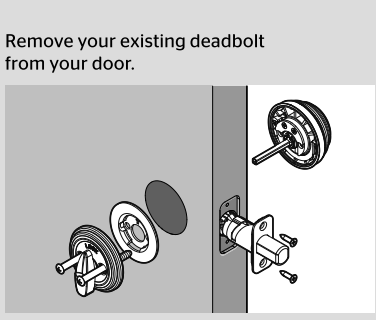


C Measure to confirm that the hole in the door is either 2-1/8" (54 mm) or 1-1/2" (38 mm).

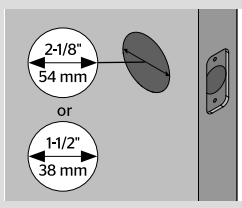


Note: Additional door preparation may be required for doors with 1-1/2" (38 mm) holes. Consult the deadbolt drilling instructions at kwikset.com/doorprep


D Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70 mm).

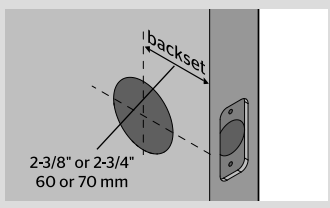

E Measure to confirm that the hole in the door edge is 1" (25 mm).

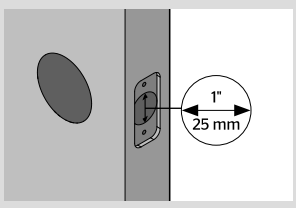


F Measure to confirm that the door is between 1-3/8" and 2" (35 mm and 51 mm) thick.

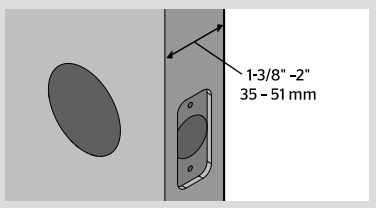


2 Install the latch and strike


For Latch / Strike Bag

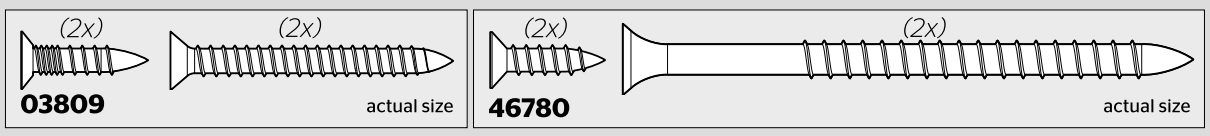


A Is the door edge chiseled?

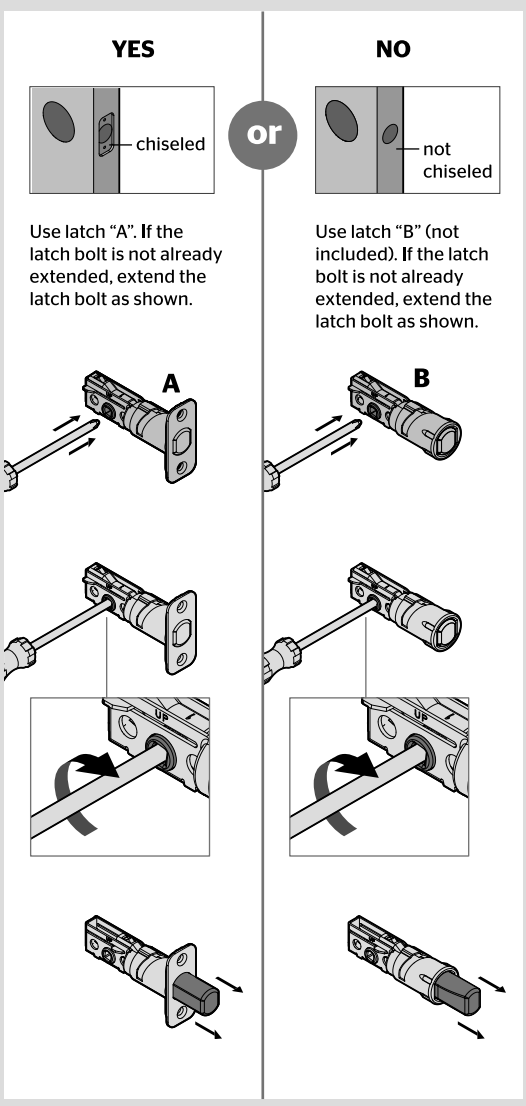


B Hold the latch in front of the door hole, with the latch face flush against the door edge.

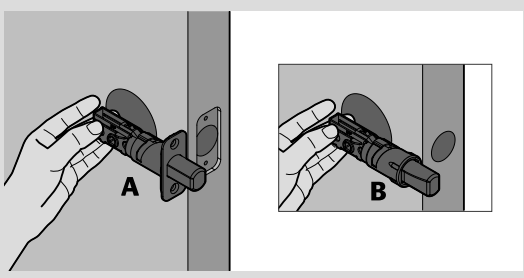

C Is the D-shaped hole centered in the door hole?

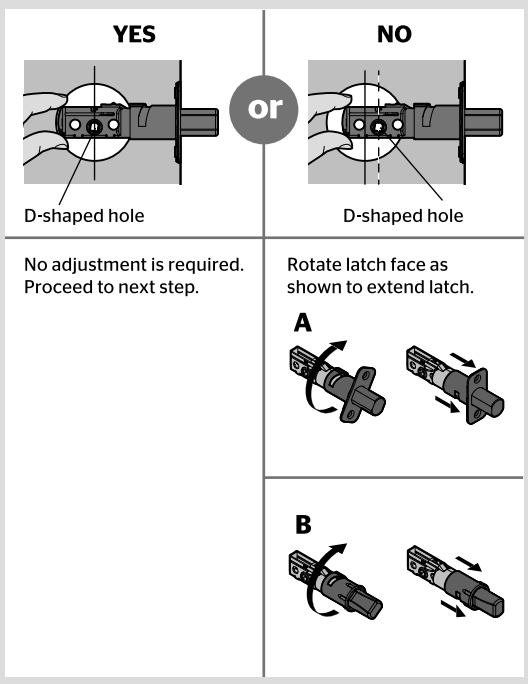


D Which latch are you installing?

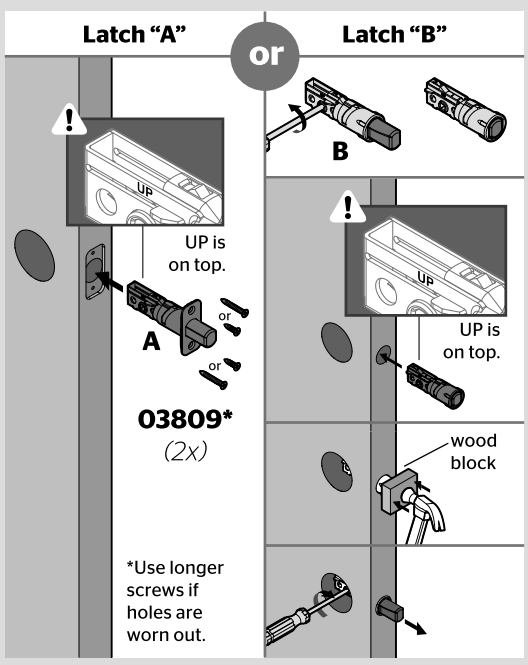


E Install the strike on the door frame.

⚠ Make sure the hole in the door frame is drilled a minimum of 1" (25 mm) deep.

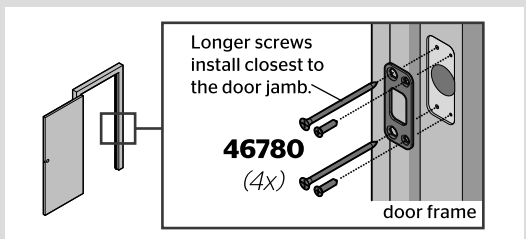


3 Install the exterior keypad


For Lock Bag

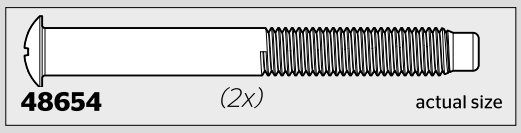


A What is the diameter of the hole in the door?

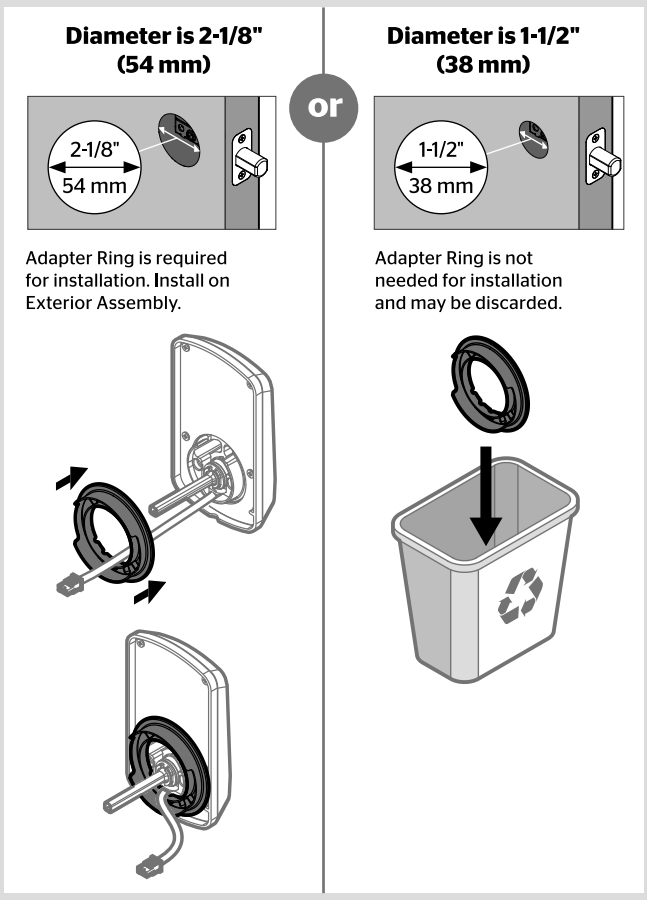

B Locate the screws for step 3C and keep them within reach.




C Install the exterior keypad and mounting plate.

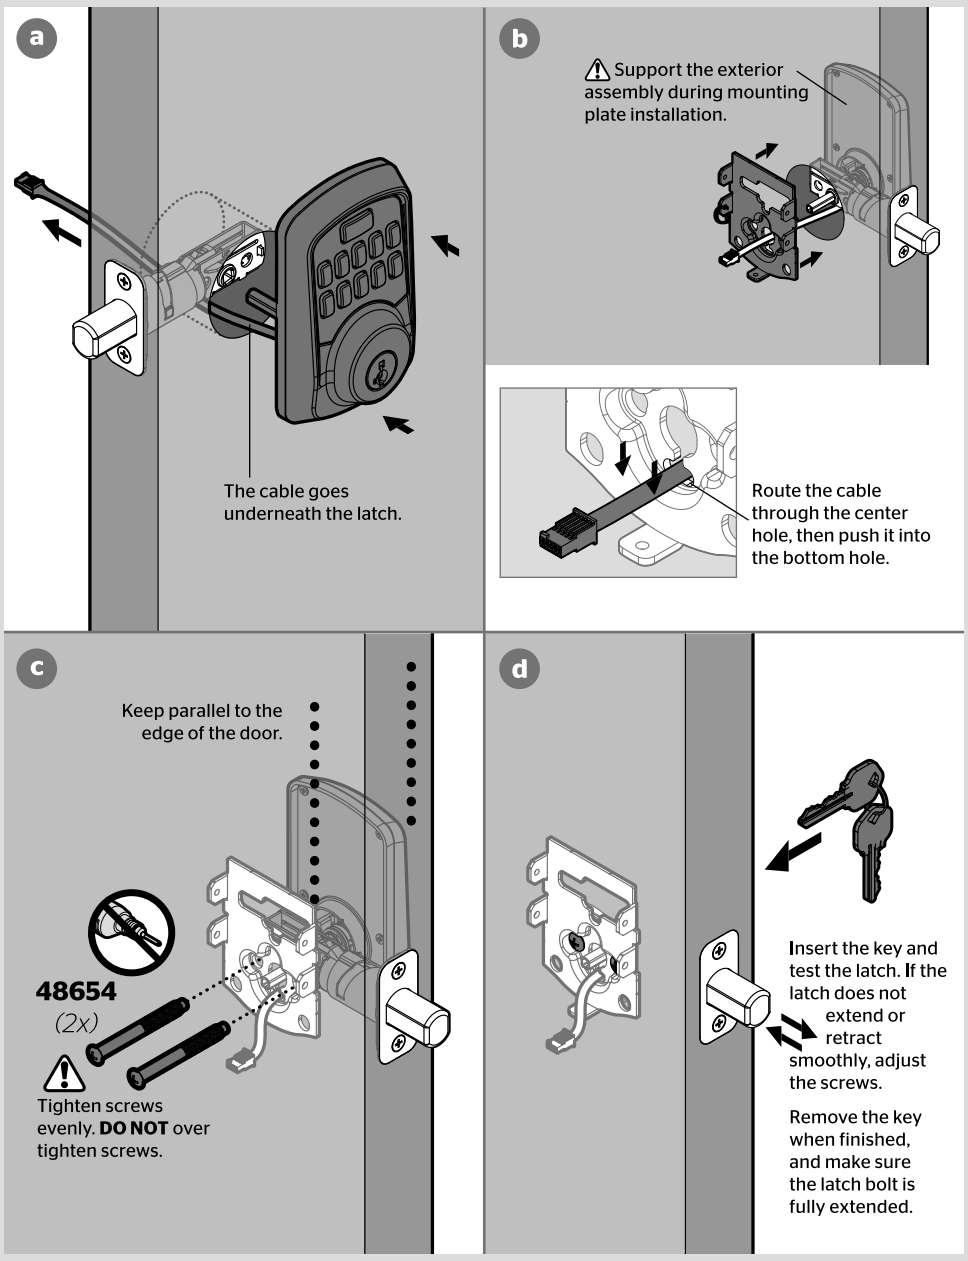


3 Install the interior assembly


For Lock Bag

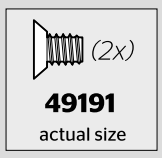

A Ensure the turnpiece shaft is pointing up, and remove the interior cover and battery pack from the interior assembly.

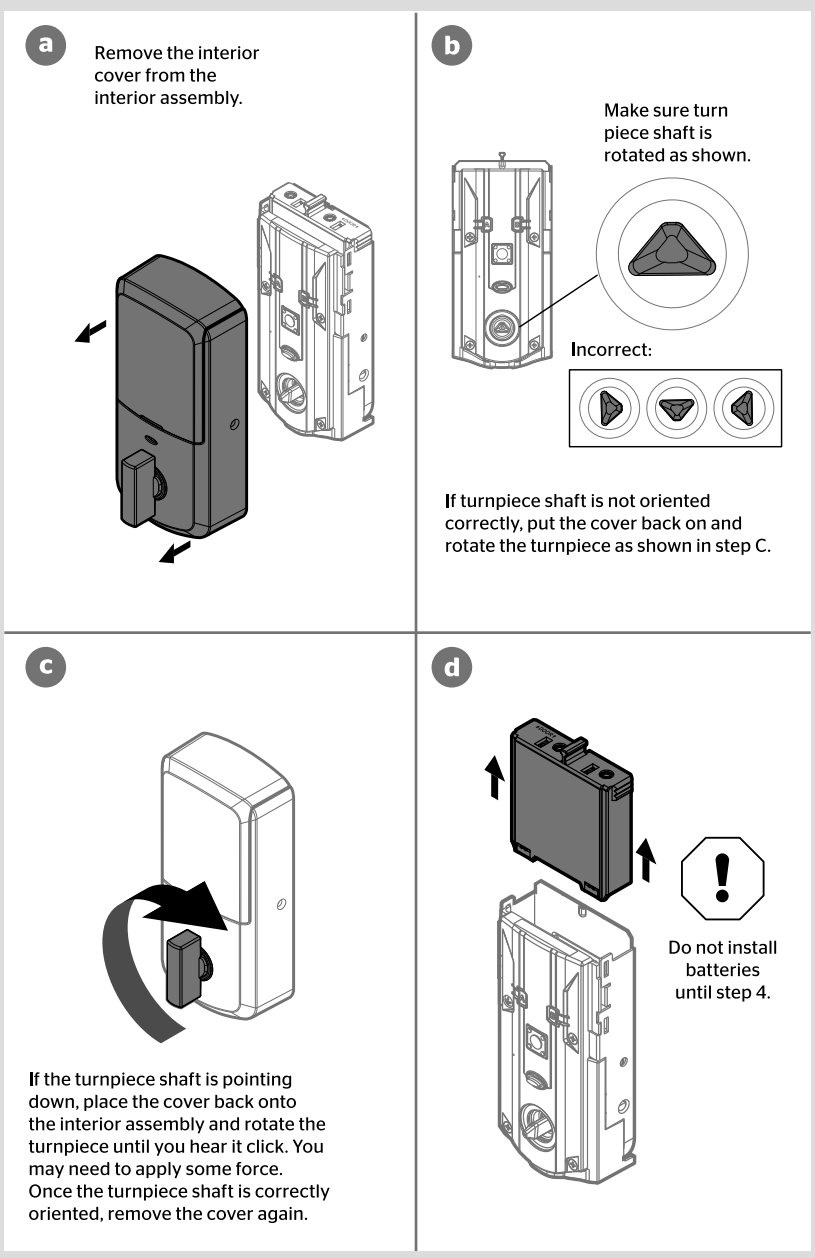


B Install the interior assembly onto the mounting plate.

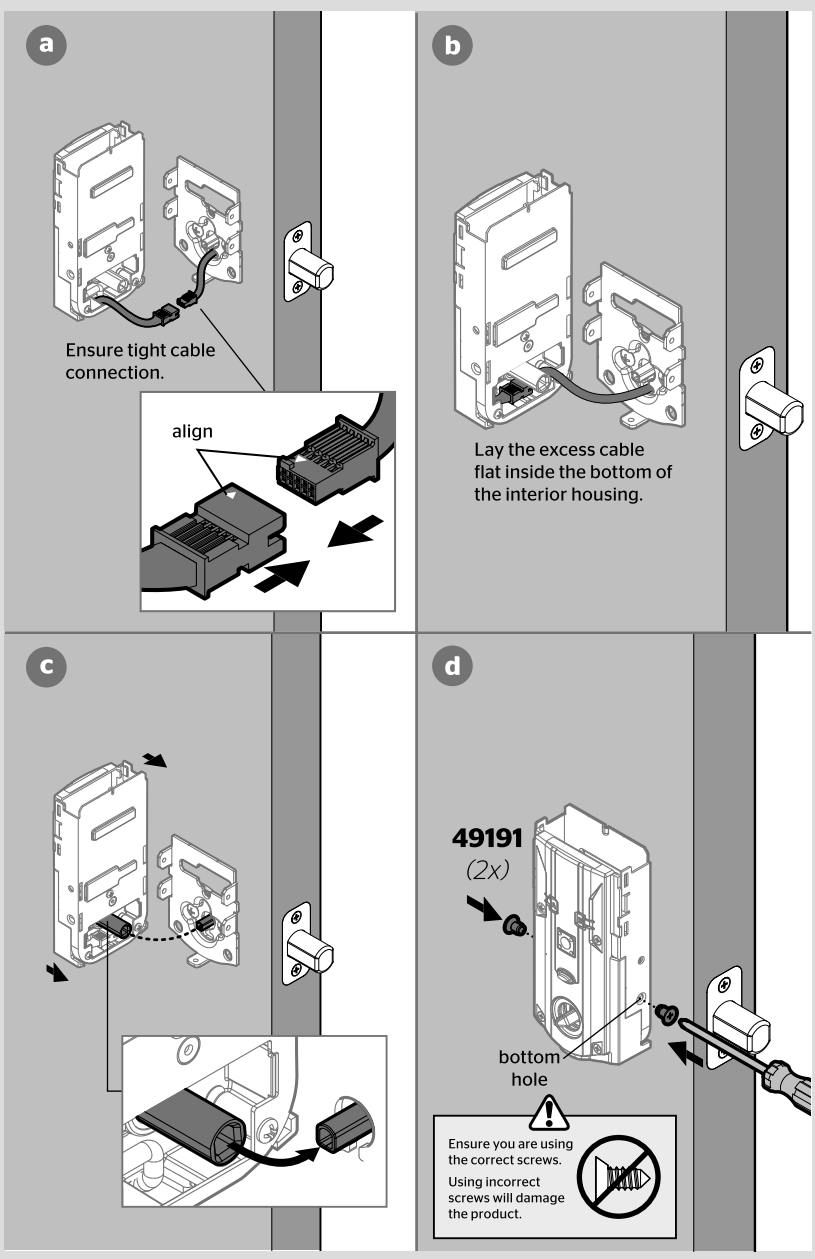

4 Install the batteries and perform the door handing process


This step will teach your lock the orientation of your door and is crucial to lock operation.

A Install 4 AA batteries in the battery pack.

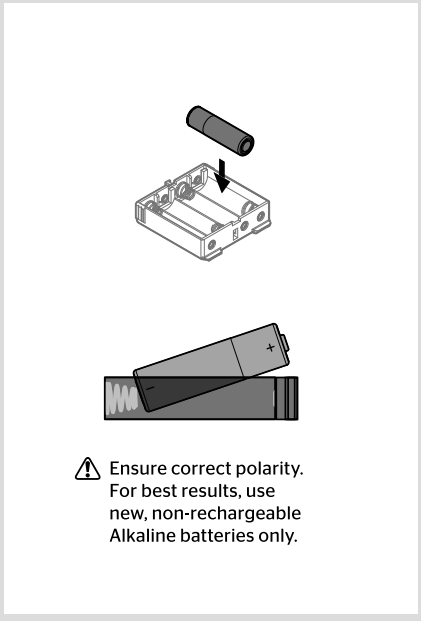


⚠ Ensure correct polarity. For best results, use new, non-rechargeable Alkaline batteries only.

B With the door open, install the battery pack to initiate auto-handing.

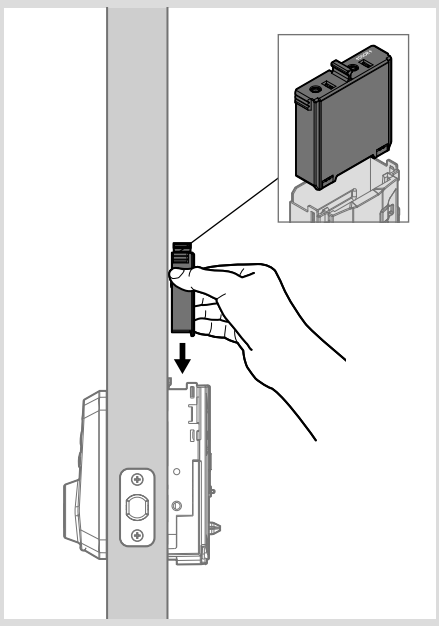


C The latch will retract and extend to learn the orientation of the door.

If the bolt does not move, make sure the batteries are correctly installed, and perform step 4B again.

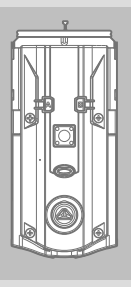

Note: The latch bolt will only retract **half way**.

D The Status LED will indicate success or failure.

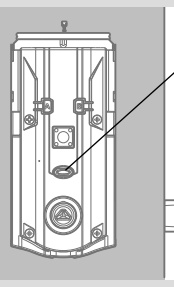


Green: Door handing was successful. Proceed to next step.

Red: Door handing was unsuccessful. Make sure the lock interior and batteries are correctly installed. Perform step 4B again.


If the door handing process is still unsuccessful after a second attempt, see the Manual Door Handing section on page 4.

5 Test the lock and check door alignment


A With the door open, insert the key to extend the latch. Ensure that the latch extends smoothly.

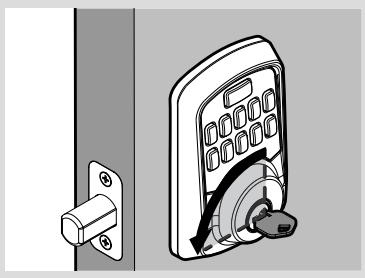


B Turn the key 180° to retract the latch. Ensure that the latch retracts smoothly.

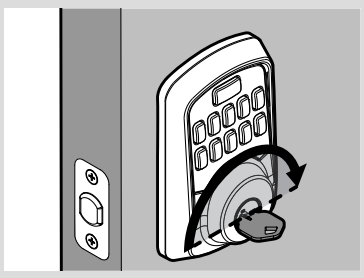

C Close the door. Insert and rotate the key to lock the door. Ensure that the door locks smoothly.

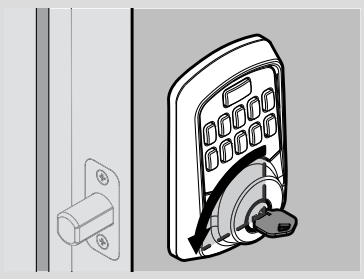

D Turn the key 180° to retract the latch. Ensure that the door unlocks smoothly.

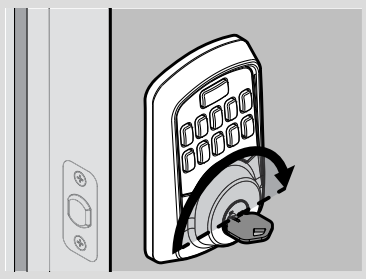


⚠ If your door does not lock and unlock smoothly, make sure you replaced your previous latch and strike with those supplied in the box.

If you still experience locking errors, call Kwikset Support to order a Warped Door Service Kit.


Kwikset Support: 1-866-863-6584

6 Install the interior cover

For Lock Bag




68611 actual size




64109 actual size

Important Information about the interior cover

The window on the interior cover is unlocked by default for easier access to the battery pack and buttons.

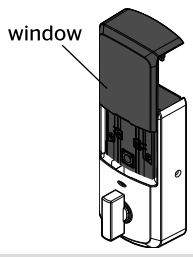


For additional security, you may choose to lock the window by installing the security screw.

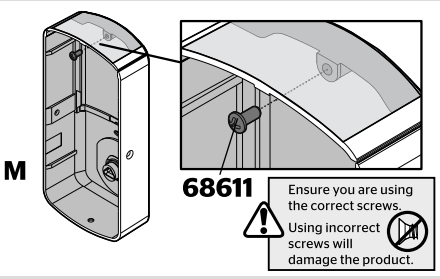

Ensure you are using the correct screws.
Using incorrect screws will damage the product.


When the window is locked, you will need to remove the entire interior cover and screws to access the battery pack and buttons.



Cover Installation

a Install cover.


Note: You may need to rotate the turn piece to align with the turn piece shaft.

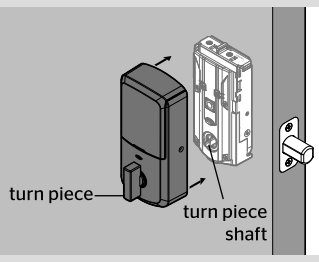

b Install screws.


64109 (3x)

Ensure you are using the correct screws.
Using incorrect screws will damage the product.

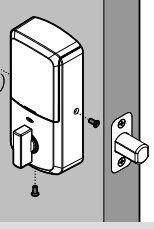


Battery Pack Access

If the window is unlocked, slide up the window to access the battery pack.



If the window is locked, remove the interior cover and screws to access the battery pack.

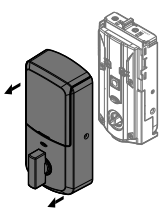

8 Download the app and create an account


⚠ **The Kwikset app is needed to use this lock. If this lock was professionally installed (or installed by someone other than the homeowner), make sure this step is performed by the homeowner.**

A Download the Kwikset app by scanning the QR code or visiting **www.kwikset.com/app** on your smartphone.


B Create your account and follow the setup instructions in the Kwikset app.

SmartCode at a Glance

Exterior

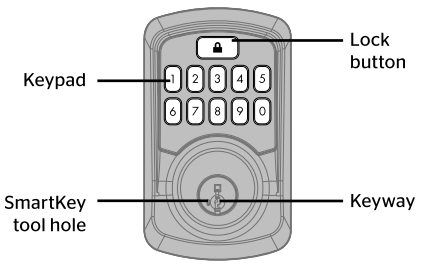

Interior (cover removed)

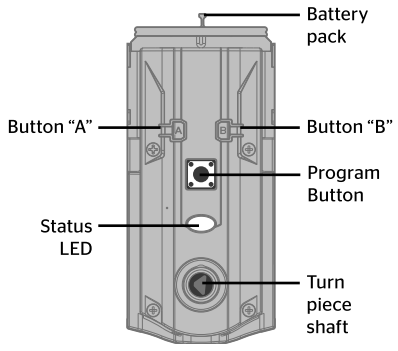


Tip: To light up the keypad while the door is locked, press the Lock button before entering your user code. The keypad will not light up if the door is unlocked.

System Alerts

Alert	Reason	Solution
Keypad flashes red once with one beep*.	One incorrect code entered.	Re-enter code.
Keypad flashes red three times with three beeps*.	No user code programmed.	Program at least one user code.
	Programming timeout after five seconds.	Attempt programming procedure again.
	Unsuccessful programming.	
Keypad flashes red 15 times with 15 beeps*	Three incorrect codes entered.	Re-enter code after 60 second keypad lockout.
Keypad flashes red with fast beeping sound for three to four seconds.	Low battery.	Replace batteries.
Keypad flashes red with continuous beeping sound for two seconds.	Door jammed while attempting to lock.	Manually re-lock door. If needed, reposition strike.
Lock beeps continuously.	Interior assembly is disconnected from exterior.	Remove battery pack, reconnect the interior to the exterior, then reinstall battery pack.

Status LED colors

These features can be adjusted in some smart home apps.

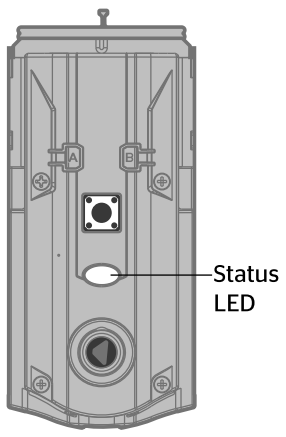


Color	Lock Status
Green (solid)	Action successful
Green (blinking)	Unlocked
Red (solid)	Door handing process unsuccessful
Red (blinking)	Action unsuccessful or incomplete
	Low battery
Blue (solid)	Bluetooth Pairing successful
Blue (blinking)	Bluetooth Pairing Mode
Amber (solid)	Entering Network Reset mode
Amber (blinking)	Network or System Reset mode. Action required.
	Locked


Manual Door Handing

If needed, the door handing process can be initiated manually. This is useful if the lock is being moved to a different door.


1 Remove battery pack.



2 Press and HOLD the Program button while reinserting the battery pack. Release button once battery pack is installed. The status LED will flash red and green.

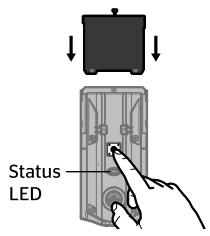

3 Press the Program button once more.

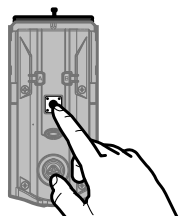

4 The latch bolt will extend and retract to learn the orientation of the door. The LED will flash green if handing is successful or red if handing is unsuccessful.

Network Reset

Network Reset will delete all Bluetooth pairings from the lock including Admins and Members.


1 Press and HOLD "A" for 10 seconds. You will hear 1 short beep and see an amber LED.




Note: After 3 seconds, you will hear 1 short beep and see a blue LED. You should continue to hold "A" to enter network reset mode.



2 Release "A." You will see a blinking amber LED to indicate it is in network reset mode.

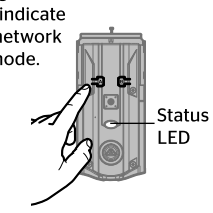


3 Press and release the Program button to confirm network reset.

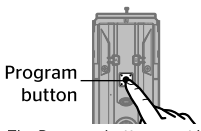

The Program button must be pressed within 10 seconds of releasing "A" or the function will time out.

4 If successful, you will hear 1 long beep and see a green LED. If unsuccessful, you will hear 5 rapid beeps and see a blinking red LED. If unsuccessful, repeat from step 1.

Successful: **Unsuccessful:**

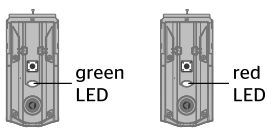


System Reset

System Reset will delete all access codes and lock settings including lock handing. The lock will run the handing process at the end of the System Reset.

1 Press "A" 10 times. You will hear 1 short beep and see a blinking amber LED to indicate it is in system reset mode.




2 Press and release the Program button to confirm system reset.

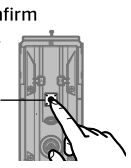

3 If successful, you will hear 1 long beep and see a green LED, and the reset process will begin. During the reset process, the LED will blink green/red a few times and will beep when complete.

If unsuccessful, you will hear 5 rapid beeps and see a blinking red LED. If unsuccessful, repeat from step 1.


Successful: **Unsuccessful:**

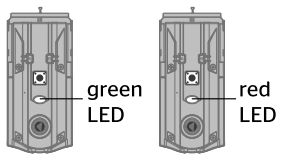


Factory Reset

Factory Reset will delete all access codes, Bluetooth pairings including Admins and Members, and lock settings including lock handing. The lock will run the handing process at the end of the Factory Reset.


1 Remove battery pack.



2 Press and HOLD the Program button while reinserting the battery pack. Keep holding the button for 30 seconds until the lock beeps and the status LED flashes red.

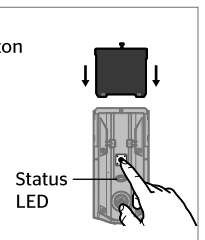

3 Press the Program button once more. The LED will flash green and red, and the auto-handing process will begin.

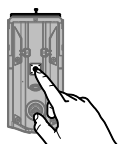

4 The latch will retract and extend to learn the orientation of the door. The LED will flash green if auto-handing is successful or red if auto-handing is unsuccessful.


Troubleshooting

A complete Aura Bluetooth Keypad Programming and Troubleshooting Guide is available at www.kwikset.com/aura/support

SmartKey Re-Keying

Re-key the lock to work with your existing key. See the supplied SmartKey Re-key instructions for more information.

Note: If Auto-Lock is enabled, remove the battery pack before re-keying your lock.

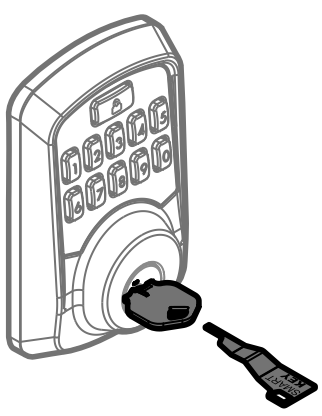

Important Safeguards

1. Read all instructions in their entirety.
2. Familiarize yourself with all warning and caution statements.
3. Remind all family members of safety precautions.
4. Protect your user codes.
5. Dispose of used batteries according to local laws and regulations.

⚠ **WARNING:** This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.

© 2019 Spectrum Brands, Inc.