
WE.LOCK

PB000KEY24 Instructions

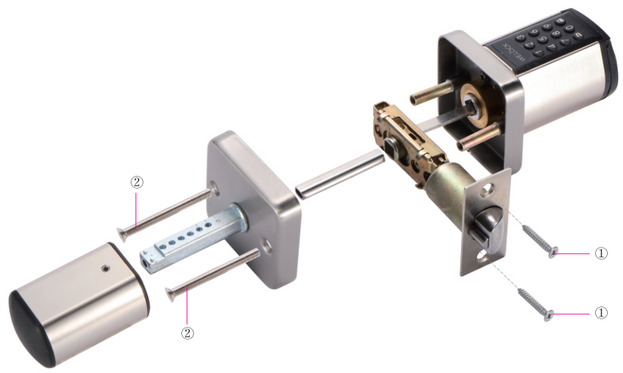


Catalogue

- 1.1 Applicable size
- 1.2 Product introduction
- 1.3 Parts list
- 2.1 Installation diagram /video
- 2.2 Scan the code to view the installation video
- 3.1 Password overview
- 3.2 Password flow chart
- 3.3 Scan the code to watch the password setting video
- 4.1 Other settings
- 4.2 Other settings: flowchart
- 4.3 Other settings: restore factory settings
- 5 Product parameters
- 6 Operation Guide
- 7 FAQ




1.1 Applicable size


1) Measure to confirm that the hole in the door is 2-1/8"(2.12in)

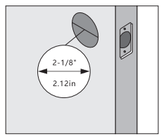


2)Measure to confirm that backset is either 2-3/8" or 2-3/4"(2.36 or 2.76 in)

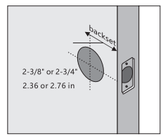

3)Measure to confirm that the hole in the door edge is 1"(0.98in)

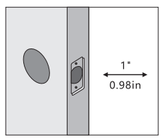

4)Measure to confirm that the door is 1-3/8" to 2"(1.38in to 1.97 in)

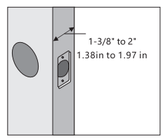

1.2 Product Introduction














1.3 Accessories list



Lock core sleeve

Gusset



Stickers
(Used to cover the door hole)



Keyx2



Fixing screw



Allen key *1




Battery installation assistance tool



Manual

2 Installation diagram/video

2.1 Picture of installation Inward opening door：The bevel of the bolt face outwards when installing

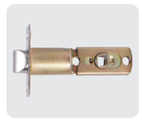

1)The length of the lock body can be adjusted according to the diameter of the keyhole



2)Install the lock body and tighten the screws




3)Install outdoor lock



4)Pull out the indoor lock handle



5)Installation drawing of lock sleeve

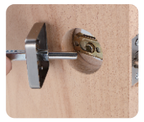

6)Install indoor lock handle



7)Tighten the screws



8)Tighten the screw on the rear handle

3.1 Passcode settings: introduction

A.Add Admin passcode:Modify Admin passcode

1)Add Admin passcode:

Totally you can set 10 passcodes including 1 Admin passcode and 9 user passcodes.Passcode length is 6 to 12 digits

2)First step: The default master code modifacation,(as the same as the Admin passcode modification)The default Admin passcode is 123456:

①Press 🔒 to wake up the keyboard

②Press 🔒+123456+🔒,The keyboard lights up;

③Enter new passcode +🔒+new passcode+🔒,modify successfully.

3)Modify Admin passcode

Press any key to wake up the keyboard,enter "🔒+Admin passcode+🔒+ 4" The keyboard lights up,enter "new passcode+🔒+new passcode +🔒"

B.Add user passcode(Up to 9 user passcodes)

Press any key to wake up the keyboard,enter "🔒+Admin passcode+🔒+1",The keyboard lights up,enter "new user passcode+🔒+new user passcode+🔒".


C.Delete user passcode


Press any key to wake up the keyboard,enter "🔒+Admin passcode+🔒+2",The keyboard lights up,enter "new user passcode +🔒".

D.Scramble code

Enter any number before or after a correct password, less than 30 digits in total is ok.

3.2 Passcode Settings

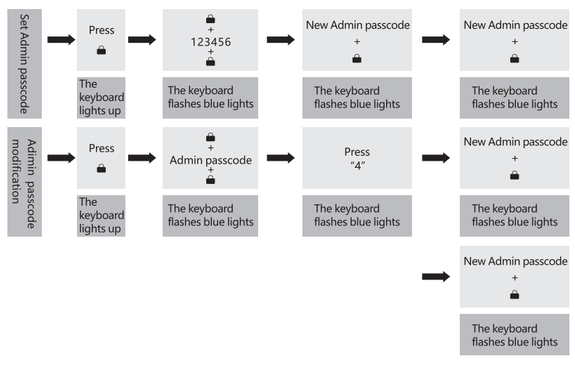

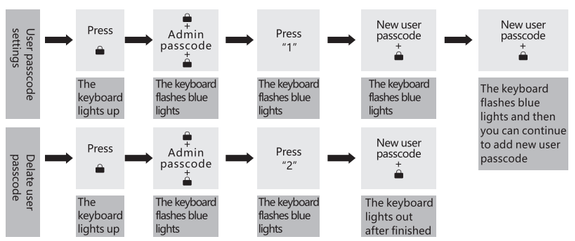

4.3 Other settings:Restore Factory Defaults

A.Press any key to wake up the keyboard,enter "🔒+Admin passcode+🔒+3",

the keyboard lights up and then press 🔒,factory default setting reset successfully

B.When the lock restores factory setting, vacation mode is on and if you want to turn off the vacation mode, you need to enter "123456"

the default master code	123456
Slient mode	off
The lock time	8 seconds

4.1 Other settings

A.the default auto lock time modification

Press any key to wake up the keyboard,enter "🔒+Admin passcode +🔒+ 5"The keyboard lights up, enter number 0-9.(The time about auto lock is the number you entering plus 5, e.g. If you want to set 10 seconds,you need to enter 5.)

B.Vacation mode

Press any key to wake up the keyboard, Enter " passcode+🔒", after unlocking,press any key to wake up the keyboard,enter "passcode + 🔒".Vacation mode on:The lock is always unlocking

Vacation mode off:Press any key to wake up the keyboard,enter "passcode+🔒".


C.Slient mode

1)The factory setting is to turn off slient mode

2)Slient mode on/off:"Press any key to wake up the keyboard, 🔒+Admin passcode+🔒+ 0",The keyboard flashed blue lights.

Slient mode: Key tone and prompt tone will be blocked when you enter password.(PS:The lock will ring when the battery is low or enter the setup menu)

4.2 Other settings：Flow Chart

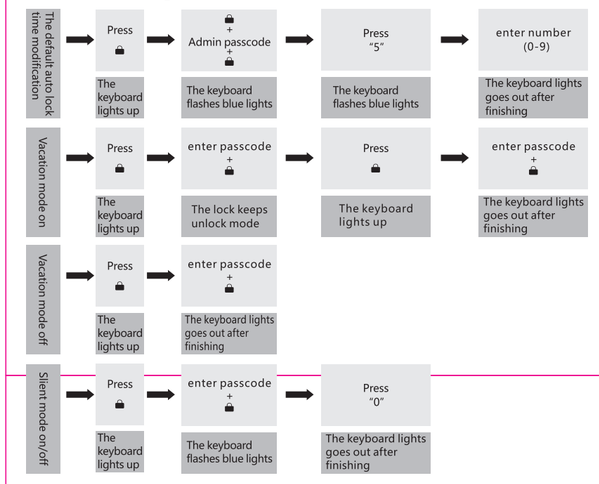


5 Specifications

Brand	WE.LOCK
Applicable door types	interior door、wooden door
Adjustable range	1 3/8" to 1 15/16"(35-50)
Operating Temperature	-25℃~ 60℃
Pressing Cycle Times	100,000 Times
Material of handle	Zinc Alloy
Way to unlock	Passcode/ Mechanical key
Battery Type	4*AAA Battery
Power input	4V-6V
Battery Replacement	Replaceable
Color	Silver
Battery Life	> 1 year

6 Operating instruction

Unlock and lock

Unlock the door from outside

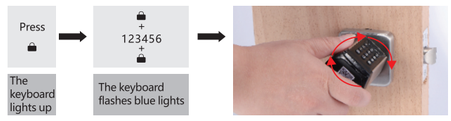

Unlock the door from inside(Turn the handle toward the door hinge to unlock)



7 FAQ

- How often is the battery need be changed?

  After the low battery alarm occurs, the battery needs to be replaced in time
- When will the low battery alarm?

  The battery power is less than 20%.
- How to enter scramble PIN code?

  Enter any number before or after the correct passcode,and then the lock will be unlocked. Scramble PIN code is less than 30 digits in total.
- How to unlock when the battery runs out?

  You can use power bank to connect the lock via usb cable to charge and unlock the door.
- How to contact customer service?

  Please contact this email: **Service@WelockGlobal.com**

2.2 Scan the QR code to view the installation video